

Getting Started **CRICUT JOY**

Scan this code for
videos and tips! →



Included with kit

- Cricut Joy machine with blade
- Cord and adapter
- Regular cutting mat
- Long cutting mat
- Card mat
- Cricut Joy Pen (Black)
- Carry Bag
- Bluetooth USB Adapter (for Windows 8+)
- Starter Tool set (L–R)

Weeder – remove unwanted vinyl & iron-on pieces from your design

Spatula—carefully lift delicate materials like paper from your cutting mat

Scraper—apply vinyl decals or clean material remnants from your mat



You supply

- Computer, tablet, or mobile device
- Free Cricut Joy (tablet/mobile device) or Cricut Design Space app (computer)
- Vinyl, fabric, paper, or iron on materials for cutting
- Colored pens compatible with Cricut Joy (for drawing)

Find designs and projects

- Use the web or find free designs in Design Space
- Access Creativebug for free using your Glencoe Public Library card

Caring for items

- Do not throw away the plastic sheet on the sticky part of the cutting mat, and replace it on top of the cutting mat when you are done
- If the blade is dull/not cutting or if the pen runs dry, alert library staff when you return the kit



TO GET STARTED, GO TO [CRICUT.COM/SETUP](https://www.cricut.com/setup)

BLUETOOTH CONNECTION AND APP DOWNLOAD REQUIRED

The Cricut Joy requires a Bluetooth connection to a mobile device, tablet, or computer. A Windows Bluetooth USB adapter is provided for computers which do not have built-in Bluetooth capabilities. Downloading the free Cricut Joy app (for mobile devices and tablets) OR Cricut Design Space app (for computers) is also required. Mobile and tablet users can optionally download the Cricut Design Space app to access free or paid designs.